


Alpha Standard

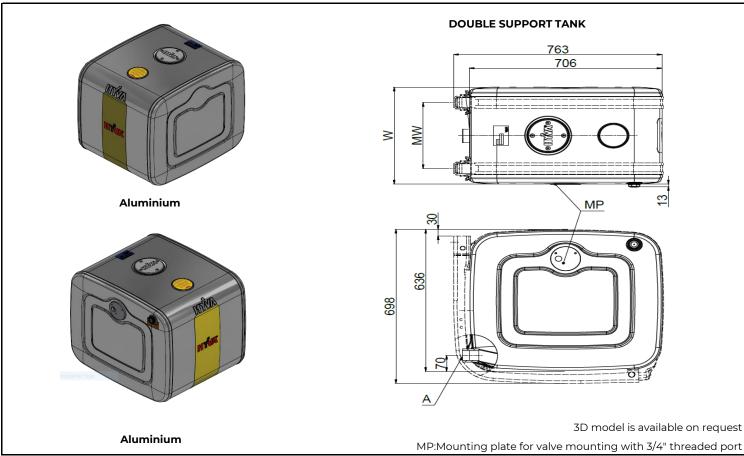

## **Specifications**

Support configuration	Double support				
Part number Aluminium	14018270	14018272	14018274	14018276	
Support with rubber, strap with rubber,	14020166				1H
mounting kit & air breather included	14020167				3H
W : Width	380	440	495	580	mm
MW : Mounting Width min / max	195 / 225	200 / 275	220 / 330	250 / 415	mm
Gross volume	155	179	201	236	litres
Working volume	130	150	170	200	litres
Weight tank (Aluminium)	15	16	17	18	kg
A : Suction port	1.5"	1.5"	1.5"	1.5"	BSP

The mounting plate (MP) port is closed with a temporary plastic plug.

#### **Technical notes**

 $\cdot$  Mount the tank according the mounting instructions  $\cdot$  Fill the tank with the recommended hydraulic oil to the centre of the level indicator  $\cdot$  Change the oil once a year  $\cdot$  Replace the air breather and return filter element twice a year  $\cdot$  Do not use the tank to stand on or as a support  $\cdot$  Do not weld on the oil tank


#### Related documentation

Mounting instructions: OIL-0014 & OIL-0015

Oil specifications: OIL-0011



Alpha Plus

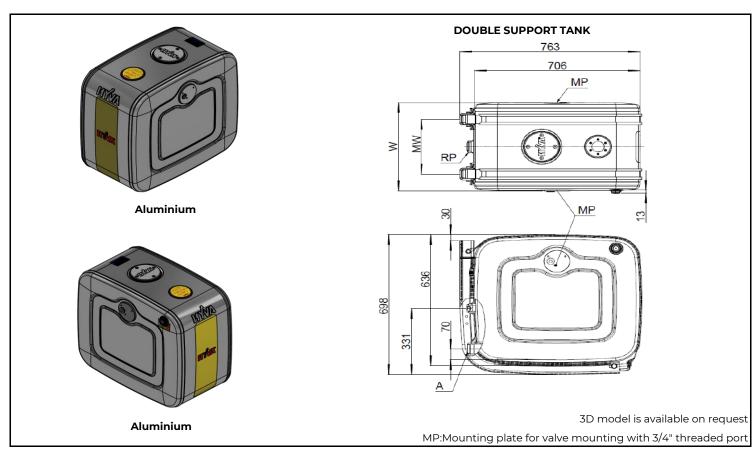

## **Specifications**

Support configuration	Double support				
Part number Aluminium plus	14018271	14018273	14018275	14018277	
Support with rubber, strap with rubber,	14020166				1H
mounting kit & air breather included	14020167				3H
W : Width	380	440	495	580	mm
MW : Mounting Width min / max	195 / 225	200 / 275	220 / 330	250 / 415	mm
Gross volume	155	179	201	236	litres
Working volume	130	150	170	200	litres
Weight tank (Aluminium)	15	16	17	18	kg
A : Suction port	1.5"	1.5"	1.5"	1.5"	BSP
Extra Return Port (RP) size	1"	1"	1"	1"	BSP

The port of the left mounting plate (MP) and the extra return port (RP) are closed with a steel plug and sealing.

Other ports are closed with temporary plastic plugs

#### **Technical notes**

 $\cdot$  Mount the tank according the mounting instructions  $\cdot$  Fill the tank with the recommended hydraulic oil to the centre of the level indicator  $\cdot$  Change the oil once a year  $\cdot$  Replace the air breather and return filter element twice a year  $\cdot$  Do not use the tank to stand on or as a support  $\cdot$  Do not weld on the oil tank

#### **Related documentation**


Mounting instructions: OIL-0014 Oil specifications: OIL-0011





Alpha Standard

## Supports, straps, rubbers, air breather & mounting kits

# Detail support with one hole and support with three holes

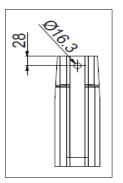

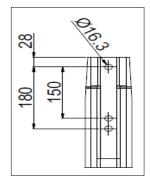

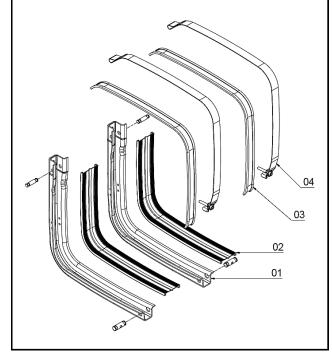

## **Double support**

#### **Full kits**

Part no.	Description
14020166	Full kit for support with one hole**
14020167	Full kit for support with three holes**

<sup>\*\*</sup>Air breather included in mounting kit

## **Separate support parts**

No.	Part no.	Description	Weight [kg]
01 & 02	14020310	Support with one hole incl. rubber	8.7
01 & 02	14020311	O20311 Support with three holes incl. rubber	
02	14020436 Rubber for support		0.4
03 & 04	14020309	Strap with rubber	1.4
03	14020428	Rubber for strap	0.2
	14020331	Mounting kit double support tank:	
		- pin bottom (2x)	
n/a		- pin top (2x)	
n/a		- bolt M12 for strap (2x)	
		- square washer M12 for strap (2x)	
		- rectangular washer (4x)*	

 $<sup>\</sup>ensuremath{^{*}}$  The washers are for mounting support to chassis with M14 bolts.

If M16 (Grade 10.9) bolts are used, see Accessoires for washer kit for M16 bolts.




## **Air Breather**

No.	Part no.	Description	Weight [kg]
05	08102116	Air breather	0.4





#### **Return filters**

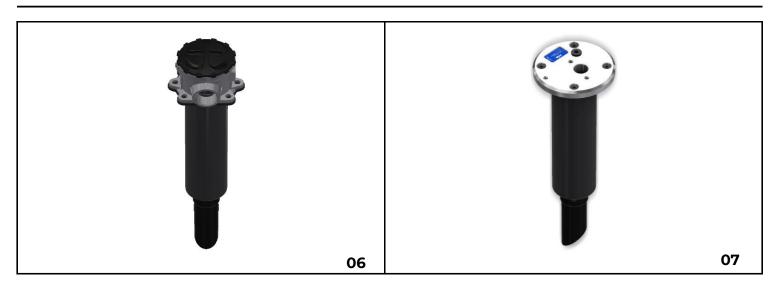

No.	Part no.	Description	Weight [kg]
06	14780352	Return filter housing type 250 L/m*	2.4
07	14895924	Return filter plate type 250 L/m*	2.1

<sup>\*</sup>Attention!: Return line filters are not in the mounting kit. To be ordered separately.


## **Strengthening Ring**



No.	Part no.	Description	
08	14020509	Strengthening ring SM tank RF kit	0.3

If hoses larger than 3/4" or multiple hoses are connected to the return filter house version (no's 06). HYVA advises to use the strengthening ring (no. 08)

## **Adaptor**

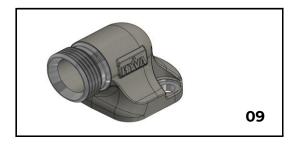

No.	Part no.	Description	Qty
09	01317987	Adaptor kit 90 for return filter-1"	7
	01317987	BSPOTC	ı

# **Mounting options**




Part no. Description		Qty
see adaptor kit	Adaptor-90-elbow-1" BSPOTC	1
see adaptor kit	Bolt HSHC M8x16x1.25 DIN 912 ZP	2
see adaptor kit	O-Ring 34.60x2.62	1




Alpha Standard


## Valve mounting options

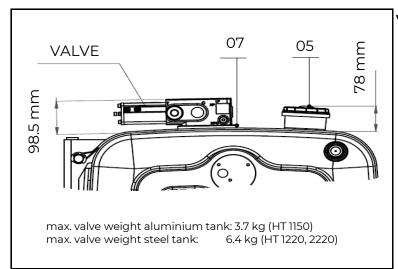

#### Valve mounted on tank

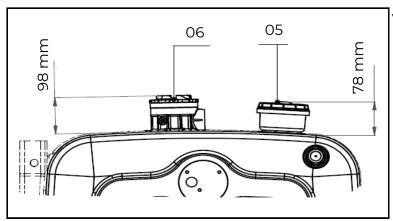

Valve mounted on chassis or cylinder (SAE)

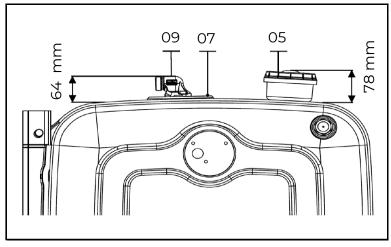

Valve mounted on chassis or cylinder with Return line Plate version